































Capabilitati	Lite Version	Professional Version	Ultimate Version
Conectare seriala indicator cantarire	✓	✓	✓
Conectare TCP/IP indicator cantarire	✓	✓	✓
Conectare afisaj auxiliar	✓	✓	✓
Determinare masa axe si total autovehicul	✓	✓	✓
Determinare tara / masa bruta / masa neta (2 cantariri)	✓	✓	✓
Posibilitate introducere configuratie autovehicul	✓	✓	✓
Calculare depasiri mase maxim admise (axe / total)	✓	✓	✓
Configurare sablon bon cantarire	✓	✓	✓
Eliberare bon cantarire (inclusiv PDF)	✓	✓	✓
Configurare useri si drepturi de acces functii program	✓	✓	✓
Export baza de date in format xlxs / accdb / ods / csv	✓	✓	✓
Avertizare expirare verificare metrologica	✓	✓	✓
Auto LogOff user	✓	✓	✓
Funcție backup / restore	✓	✓	✓
Funcții cautare / sortare baza de date cantariri	✓	✓	✓
Configurare sabloane documente	✓	✓	✓
Eliberare aviz insotire marfa (inclusiv PDF)	✓	✓	✓
Eliberare factura fiscala (inclusiv PDF)	✓	✓	✓
Funcție recunoastere indicator cantarire	✗	✓	✓

Conectare camere video			
Conectare bariere optice incadrare autovehicul			
Control semafoare / bariere			
Control elemente de avertizare sonora / optica			
Export date cantarire in timp real in format txt / csv			
Export date cantarire in timp real in format access (mdb)			
Posibilitate conectare 2 indicatoare simultan			
Conectare camere LPR			
Recunoastere automata numar de inmatriculare / tara			
Export date cantarire in timp real in SQL server			
Semnare documente cu certificat digital	